# DO IT YOURSELF
with the experts on-hand
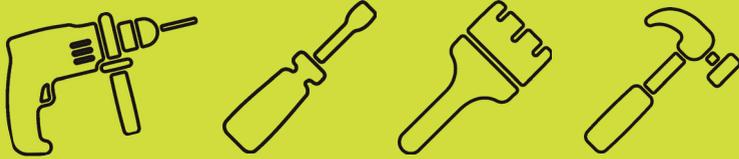
How to tile onto...

Hard Vinyl Floor Tiles
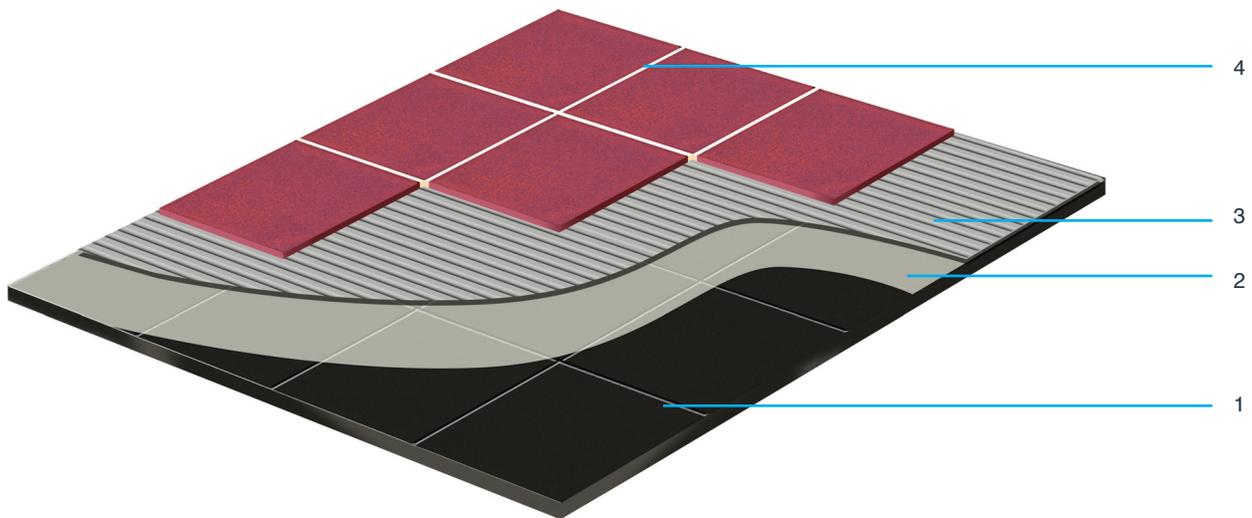
1. Thoroughly clean the hard vinyl tiles using Nicobond Super Cleaning Crystals mixed with hot water. This is to remove any traces of polish, grease or other contaminants. Any loose tiles and residues of old adhesive should be removed. Ensure the tiles are firmly bonded
2. Brush apply a coat of slurry primer onto the surface consisting of 1 volume water, 1 volume Nicobond Primer and 1 volume of the recommended Nicobond powder adhesive and allow to set.
3. Apply a layer of the recommended adhesive and press tiles with slight sliding or twisting action.
4. Fill joints between tiles using recommended grout.

* Do not tile to flexible Vinyl Tiles or Sheet. These should be removed together with any residual adhesive.